

SAFETY PRECAUTIONS

*** PLEASE READ BEFORE BURNING ***

- ➔ INCINERATION is a good option in cases where garbage or disposal options do not exist: yard waste, wood that is clean, dry, unpainted and untreated, cardboard items & any other non-recyclable paper products that are safe to burn.
- ➔ IMPORTANT NOTE: Some state and local governments ban the burning of many waste materials and household garbage. It is important to contact your local city or county environmental office or state environmental agency to obtain necessary burning permits and to find out about local and state burning restrictions.
- ➔ Only incinerate using fully assembled models. **(including all seam screws)**
- ➔ All models are for outside use only.
- ➔ Always locate your Burn Right model in the center of a cleared area 40 feet in diameter including clear overhead.
- ➔ Add burnable items so airflow is not restricted. Avoid stacking files and confidential papers tightly together like a book.
- ➔ **Light incinerator/thermal shredder from the top.** Always incinerate with cover dome side up.
- ➔ Use handle & heavy gloves while handling the spark arrestor cover to prevent burns.
- ➔ Never burn in high winds.
- ➔ Incinerator to be used for burning dry material, yard waste and non-recyclable paper products.
- ➔ Do not use flammable liquids.
- ➔ Do not burn pressurized containers, i.e. aerosol cans, etc.
- ➔ Ashes may take 1 or more days to completely cool. Pour water on ashes to completely extinguish if you have to move your outdoor fireplace before the ashes have completely cooled.
- ➔ For cooking we recommend the use natural hardwoods like hickory, cherry or apple wood depending on the flavor you desire.
- ➔ Do not put burnt ashes in garden, dispose of as waste material. Note: Yard waste as well as clean and untreated wood ashes are ok.
- ➔ Keep children and pets away from unit. (Temperatures may reach 1500-1800 °F)
- ➔ Unit should not be left unattended.
- ➔ While burning, your model must be level and tight to the ground and the Grill/Spark Arrestor Grate must always be in place to reduce the risk of fire spreading.
- ➔ Keep combustible materials away from exterior while burning.
- ➔ Do not burn any type of battery.
- ➔ These are only a few Safety Precautions; your Common Sense is required at all times.

BURNING EFFICIENTLY IS IMPORTANT!

High TEMPERATURE burning is very important. To incinerate completely, eliminating smoke and smoldering airflow is required. Our patented design introduces the proper amount of air to burn efficiently. Never let the ashes build up so they touch the bottom of the angle grates. Ash removal is made easy. After the ashes have thoroughly cooled simply tip the incinerator towards you and roll away from the pile of ashes. Remove the ashes and return your incinerator to its original burning position.

Maintenance

All models are 100% Stainless Steel but we recommend that you hose down your entire unit and clean your Grill/Spark Arrestor Grate with a scrub pad before grilling.

ASSEMBLY INSTRUCTIONS

****READ ALL INSTRUCTIONS THOROUGHLY BEFORE ASSEMBLY.****

Equipment for assembly: Leather work gloves, Cordless Drill with clutch and 5/16" hex driver and 2 Pliers.

STEP 1 **Caution: Parts may have sharp edges and should be handled only when wearing leather work gloves.**



 
Item A - Panel



Item F - Screws

Take two (2) Item A Panels and stand them on end. Make sure all panels have the Δ shaped hole, which are for the angle grates, closest to the ground. The screws must be inserted from the outside but should not be **completely** tightened at this time. Place Item F Screws in all the holes, except the 1st and 2nd, holes from the top and the last hole on the bottom. Secure the two panels together. The 1st and 2nd holes will be used later to secure the Grill/Spark Arrestor Grate clips, item G. The last hole is for the base ring. Follow the above procedure to assemble the third and fourth panel to make the cylinder. Note: Model 2210 does not require the Angle Grates.

STEP 2

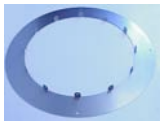

Item C Base Ring

A. To assemble the base ring use the 10-32 hex washer head slotted machine screws and lock nuts connect the pieces to make the Base Ring, Item C.
 B. Turn your model upside down. Use twelve (12) Item F Screws to assemble the base ring to the bottom, tighten the Base Ring screws and make sure you tighten the 4-seam screws last.



STEP 3



Item G Clip (3)

Turn your model right side up with Δ shaped holes closest to the ground. Take three (3), Item G Clips and six (6) F Screws and place one on one side and another on the opposite side (180 degrees apart). The third Clip will be fastened using holes #1 and 2 as shown. (see picture above)

STEP 4

 
Stand your model on a flat surface, so the base ring is down and square, and then tighten all Item F screws.

STEP 5



Item E - Angle Grate (2)

Insert two (2) Item E Angle Grates horizontally into the Δ shaped holes from outside the incinerator through the Δ on the other side. One Angle Grate in the top of the Δ shaped holes and the second Angle Grate in the lower Δ shaped holes. The Angle Grates should form an **X** when looking into the cylinder the top (see picture). Take 2 pliers and bend the Angle Grate tabs up to prevent the angle grate from falling into the cylinder. The tabs are on the ends of the Angle Grate.

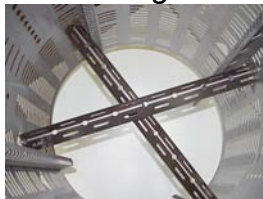

STEP 6



Item B –
Grill/Spark
Arrestor
Grate.

CAUTION: ALL MODELS MUST BE BURNT ON A FLAT, LEVEL SURFACE. Place your new Burn Right Model on the ground or if you purchased an Ash Catcher, position on top of the Ash Catcher. Slide the Item B Stainless Steel Grill/Spark Arrestor Grate on the top of the unit through the three (3) clips. You are now ready to experience efficient burning. Please read Safety Precautions and be completely ready to Burn **“LIGHT FROM THE TOP”**

WARRANTY INFORMATION - Warranty on workmanship defects 30 days from date of purchase. Returns must be made before burning. All other warranties express or implied are waived.

Handle

Insert handle with the cover either dome up or dome down into the first line of straight holes on the cover.

 


Dome Up



Dome Down

Optional Ash Catcher Model (22-AC)

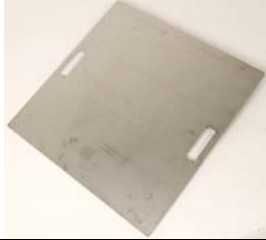

304 Stainless Steel 23-1/2” Square Ash Catcher Model 22-AC.

Simply place on the ground under any model to easily dispose your ashes.

Burn Right Products invite you to send us your testimonials and/or pictures of your incinerator burning.



Burn Safe!
Thank you for your order.

Burn Right Products, LLC